


# UNIQUE<sup>®</sup> APPLIANCES

*Classic*  
by UNIQUE

## CLASSIC RETRO BY UNIQUE OVER THE RANGE MICROWAVE

**MODEL NUMBER:** UNQ-30CR OTR T, UNQ-30CR OTR B, UNQ-30CR OTR LG, UNQ-30CR OTR W

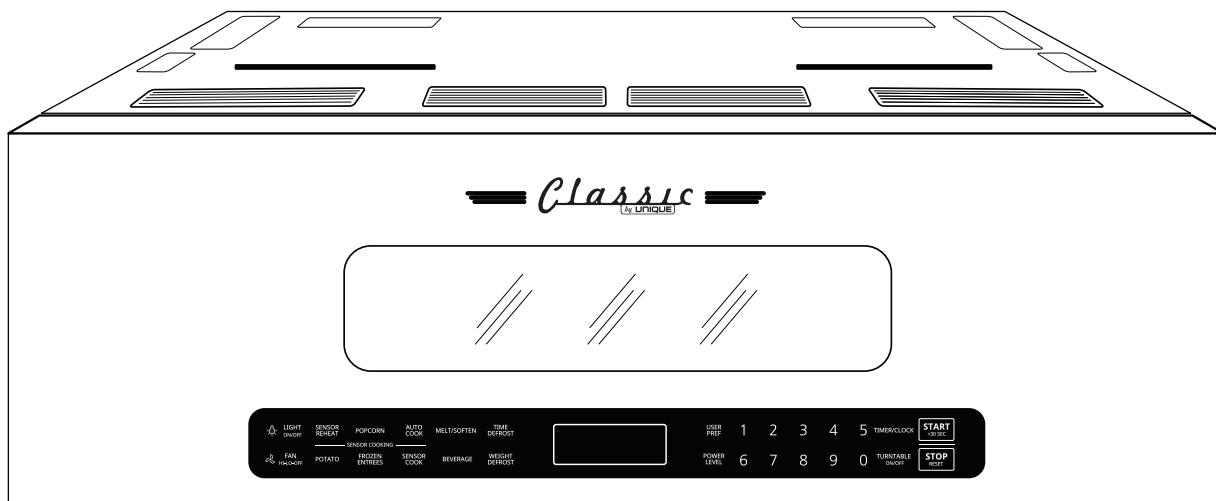

**C** **UL** **US**  
**LISTED**  
**54NJ**  
**E3114265**

**USER GUIDE**  
serial number:

[Empty dotted box for serial number entry]

FEB24V1

# TABLE OF CONTENTS

<b>IMPORTANT SAFETY INSTRUCTIONS</b> . . . . .	2
• precautions to avoid possible exposure to excessive microwave energy . . . . .	3
<b>RADIO INTERFERENCE</b> . . . . .	5
<b>GROUNDING INSTRUCTIONS</b> . . . . .	6
• utensils and cookware . . . . .	6
• control panel . . . . .	8
<b>OPERATION</b> . . . . .	8
• setting the clock . . . . .	8
• setting the timer . . . . .	9
• programming cooking time . . . . .	9
• power level chart . . . . .	10
• popcorn/potato . . . . .	11
• sensor cook . . . . .	12
• sensor reheat . . . . .	13
• melt/soften . . . . .	14
• auto cook . . . . .	15
• frozen entrées . . . . .	16
• weight defrost . . . . .	16
• time defrost . . . . .	17
• defrosting tips . . . . .	17
• speed cooking . . . . .	18
• child lock . . . . .	18
• vent fan . . . . .	18
• light . . . . .	19
• turntable on/off . . . . .	19
• inquiring mode . . . . .	19
• user preferences . . . . .	19
• volume low/med/high/off . . . . .	20
• weight lbs/kg . . . . .	20
• clock display on/off . . . . .	21
• demo setting . . . . .	21
<b>TROUBLESHOOTING GUIDE</b> . . . . .	22
<b>WIRING DIAGRAM</b> . . . . .	23
<b>RATING LABEL</b> . . . . .	24
<b>WARRANTY</b> . . . . .	25
<b>APPLIANCE INFORMATION</b> . . . . .	26
<b>PRODUCT REGISTRATION</b> . . . . .	26
<b>CONTACT US</b> . . . . .	27
<b>NOTES</b> . . . . .	27



MANUFACTURED & CERTIFIED BY  
Unique Appliances Ltd

## IMPORTANT SAFETY INSTRUCTIONS



### BEFORE YOU BEGIN

Read these instructions completely and carefully.

### IMPORTANT

- Observe all governing codes and ordinances.
- **Note to Installer** – Be sure to leave these instructions for the consumer’s and local inspector’s use.
- **Note to Consumer** – Keep these instructions with your User Guide for future reference.
- **Proper installation is the responsibility of the installer. Product failure due to improper installation is not covered under the appliance warranty.**
- **Before operating your new microwave oven, make sure you read and understand this Use and Care Guide completely.**

### FOR YOUR SAFETY

Read and observe all CAUTIONS and WARNINGS shown throughout these instructions. While performing installations described in this booklet, gloves and safety glasses or goggles should be worn.



### PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this oven with the door open since open door operation can result in harmful exposure to microwave energy.
- Do not to override or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow grease or residue to build up on the microwave door seals.
- Do not operate the oven if it is damaged. It is important that the microwave door close properly and that there is no damage to the door, hinges and latches, door seals and sealing surfaces.
- The microwave should not be adjusted or repaired by anyone except properly qualified service personnel.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read all instructions before using the microwave.
2. Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" found on page 3.
3. This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" found on page 6.
4. Install or locate this appliance only in accordance with the provided installation instructions.
5. Some products such as whole eggs and sealed containers (lidded containers, sealed glass jars) can explode due to pressure build-up and should not be heated in this oven.
6. Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
7. HOT CONTENTS CAN CAUSE SEVERE BURNS. DO NOT ALLOW CHILDREN TO USE THE MICROWAVE. Use caution when removing hot items.
8. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
9. This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
10. Do not cover or block any openings on the appliance.
11. Do not store this appliance outdoors. Do not use this product near water - for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
12. Do not immerse cord or plug in water.
13. Keep cord away from heated surfaces.
14. Do not let cord hang over edge of table or counter.
15. When cleaning door surfaces, door edges and gasket, use a mild, nonabrasive soaps or detergents applied with a sponge or soft cloth. Rinse well.
16. To reduce the risk of fire in the oven cavity:
  - Do not overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
  - Remove wire twist-ties from bags and packaging before placing in oven.
  - If food or materials inside the oven catch fire, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
  - Do not use the microwave for storage purposes. Do not leave paper products, cooking utensils, or food in the cabinet when not in use.
17. Liquids, such as water, coffee, or tea are can be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present.  
THIS COULD RESULT IN VERY HOT LIQUID SUDDENLY BOILING OVER WHEN THE CONTAINER IS MOVED OR A UTENSIL IS PLACED IN THE LIQUID.  
To reduce the risk of injury to persons:
  - Stir the liquid both before and halfway through heating it. Do not overheat the liquid.
  - Do not use straight-sided containers with narrow necks.
  - After heating, allow the container to stand in the microwave oven for a short time before removing the container.
  - Use extreme care when placing a spoon or other utensil into the container.

## IMPORTANT SAFETY INSTRUCTIONS (continued)

18. Oversized food or oversized metal utensils should not be inserted in a microwave as they may create a fire or risk of electric shock.
19. Do not clean with metal scouring pads. Metal debris can come off the pad and interfere with the microwave's operation, causing arcing, sparking, or a risk of electric shock.
20. Do not use paper products in the microwave; they can ignite.
21. Do not store any materials, other than manufacturer's recommended accessories, in the microwave when not in use.
22. Do not cover the turntable or any other part of the microwave with metal foil. This will cause overheating of the microwave.
23. Clean ventilation hoods frequently - grease should not be allowed to accumulate on hood or filter.
24. When flaming foods under the hood, turn the fan on.
25. Use care when cleaning the vent-hood filter. Corrosive cleaning agents, such as lye-based oven cleaners, may damage the filter.
26. Suitable for use above both gas and electric cooking equipment.

**SAVE THESE INSTRUCTIONS - THIS DEVICE COMPLIES WITH PART 18 OF THE FCC RULES.**



### **PROP 65 WARNING FOR CALIFORNIA RESIDENTS**

The California Safe Drinking Water and Toxic Enforcement Act of 1986 (Proposition 65) requires the Governor of California to publish a list of substances known to the State of California to cause cancer or reproductive harm. In addition, businesses must warn customers of potential exposure to such substances

## RADIO INTERFERENCE

1. Operation of the microwave oven may cause interference to your radio, TV or similar equipment.
2. When there is interference, it may be reduced or eliminated by taking the following measures:
  - Clean door and sealing surface of the oven
  - Reorient the receiving antenna of radio or television.
  - Relocate the microwave oven with respect to the receiver.
  - Move the microwave oven away from the receiver.
  - Plug the microwave oven into a different outlet so that microwave oven and receiver are on different branch circuits.
3. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

## GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord with a grounding wire and a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

**WARNING:** Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounded plug, and 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.



### **DANGER - Electric Shock Hazard**

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

## UTENSILS AND COOKWARE

### **CAUTION - Personal Injury Hazard**

Tightly-closed containers could explode. Closed containers should be opened and plastic pouches should be pierced before cooking.

Carefully review the "Materials you can use in microwave oven/ Materials you shouldn't use in a microwave oven" sections on page 7. There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

#### **Utensil Test:**

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute. Do not exceed 1 minute cooking time.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.

## UTENSILS AND COOKWARE (continued)


### Materials you can use in a microwave oven

Browning dish	The bottom of browning dish must be at least $\frac{3}{16}$ inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Microwave cooking bags	Follow bag manufacturer instructions. Do not close with metal tie or twist-tie. Make slits or puncture the bag to allow steam to escape.
Paper plates and cups	Use for brief warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Use plastic that is labeled "Microwave Safe" only. Some plastic containers soften as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

### Materials you shouldn't use in a microwave oven

Aluminum Tray	May cause arcing. Transfer food into a microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into a microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may get very hot and/or cause arcing.
Metal twist-ties	May cause arcing and could cause a fire in the oven.
Paper bags	May smoke or ignite.
Plastic or styro-foam	Plastic and/or styrofoam may melt or contaminate the food/liquid inside when exposed to high temperature
Wood	Wood will dry out when used in the microwave oven and may split or crack.

# CONTROL PANEL

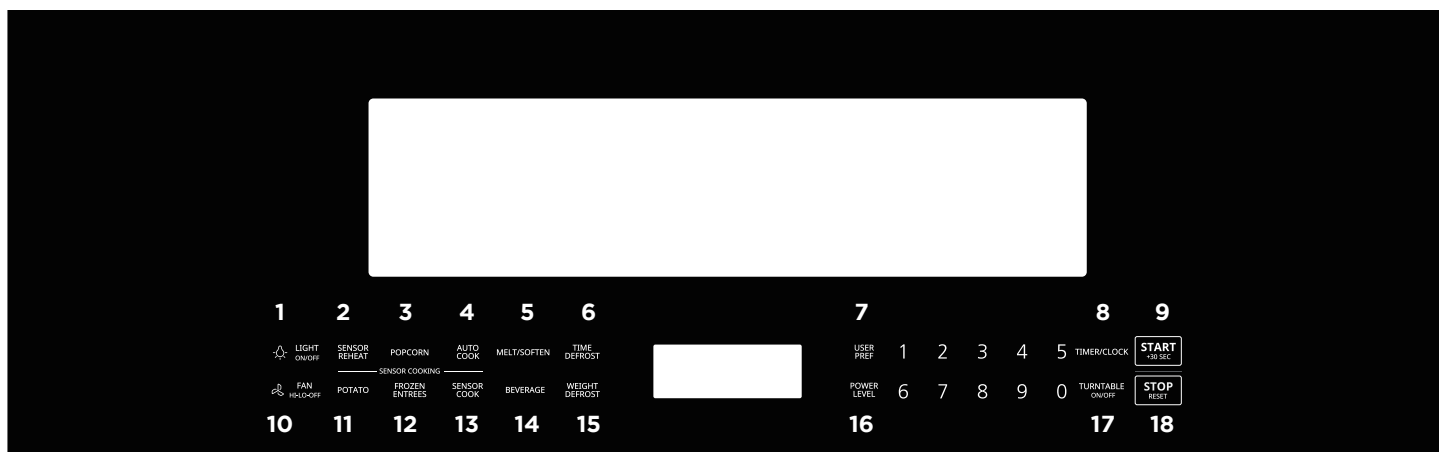

NUMBER	SETTING
1	Light ON/OFF
2	Sensor Reheat
3	Popcorn
4	Auto Cook
5	Melt/Soften
6	Time Defrost
7	User Pref
8	Timer/Clock
9	Start/+30 Sec

NUMBER	SETTING
10	Fan HI-LO-OFF
11	Potato
12	Frozen Entrees
13	Sensor Cook
14	Beverage
15	Weight Defrost
16	Power Level
17	Turntable ON/OFF
18	Stop/Reset

# OPERATION

## Setting the clock:

In standby mode:

Suppose you want to set the clock to the current time to 10:59.

touch:	display shows:
1. TIMER/CLOCK X2	ENTER TIME 12:00
2. (1) (0) (5) (9)	10:59 <small>PRESS START</small>
3. <b>START</b> +30SEC.	10:59



## OPERATION (continued)

Your microwave oven can be used as a kitchen timer. You can set up to 99 minutes, 99 seconds. The kitchen timer can be used while the microwave oven is running.

### Setting the timer:

Example: setting the timer for three minutes:

touch:	display shows:
1. TIMER/CLOCK X1	<small>TIMER</small> ENTER TIME
2. (3) (0) (0)	<small>TIMER</small> 3:00
3. <b>START</b> +30SEC.	<small>TIMER</small> 3:00 Time counting down

**NOTE: No timed programs can be run while the timer is running.**

Your microwave oven can also be programmed for cooking times up to 99 minutes and 99 seconds (99:99). Always enter the seconds after the minutes, even if they are both zeros.

### Programming a cooking time:

In Standby, Clock or Timer mode:

Suppose you want to set a cooking time of 2 minutes at 90% power:

touch:	display shows:
1. (2) (0) (0)	<small>PRESS START</small> 2:00 <small>MICRO</small>
2. <b>POWER LEVEL</b> X1	<small>PRESS START</small> PL-HI
3. <b>POWER LEVEL</b> X1 or (9)	<small>PRESS START</small> PL-90
4. <b>START</b> +30 SEC	<small>MICRO</small> 2:00 <small>COOK</small> Time counting down

## OPERATION (continued)

### POWER LEVEL CHART

<b>PRESS</b>	<b>POWER LEVEL</b>	<b>DISPLAY</b>
power level x 1	100%	PL-HI
power level x 2 or 9	90%	PL-90
power level x 3 or 8	80%	PL-80
power level x 4 or 7	70%	PL-70
power level x 5 or 6	60%	PL-60
power level x 6 or 5	50%	PL-50
power level x 7 or 4	40%	PL-40
power level x 8 or 3	30%	PL-30
power level x 9 or 2	20%	PL-20
power level x 10 or 1	10%	PL-10
power level x 11 or 0	0%	PL-0

## OPERATION (continued)

### POPCORN

Press "Popcorn" key and LED displays 3.3 oz. and the "PRESS AGAIN FOR OPTIONS" icon. You can press the "Popcorn" key again to select 3.0 oz.

Example: setting a cook time for 3.0 oz. popcorn:

touch:	display shows:
1. POPCORN X2	<small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> <span style="font-size: 2em; font-weight: bold;">3.0</span> <small>oz</small>
2. <span style="border: 1px solid black; padding: 2px 5px; display: inline-block; text-align: center;"><b>START</b> <small>+30 SEC</small></span>	Time counting down <small>(3 seconds later)</small>

Press popcorn pad	Amount
x 1	3.3 oz.
x 2	3.0 oz.

### POTATO

To cook a potato, pierce the skin several times and place it in the microwave.

In Standby, Clock or Timer mode:

Press "Potato" key and the screen will display POTATO, and press START. You can press START again to increase cooking time by 30 second increments.

touch:	display shows:
1. POTATO	<small>PRESS START</small> <span style="font-size: 2em; font-weight: bold;">POTATO</span> <small>SENSOR</small>
2. <span style="border: 1px solid black; padding: 2px 5px; display: inline-block; text-align: center;"><b>START</b> <small>+30 SEC</small></span>	<span style="font-size: 2em; font-weight: bold;">POTATO</span> <small>SENSOR COOK</small>

## OPERATION (continued)

### SENSOR COOK

NOTE: The weight pre-settings of these menus cannot be adjusted.

In Standby, Clock, or Timer Mode:

**touch:**

**display shows:**

1. <b>SENSOR COOK</b> X1	PRESS AGAIN FOR OPTIONS/ PRESS START <b>FROZEN</b> <small>SENSOR</small> PRESS AGAIN FOR OPTIONS/ PRESS START <b>VEGGIES</b> <small>SENSOR</small>
2. <b>START</b> <small>+30 SEC</small>	<b>FROZEN</b> <small>SENSOR COOK</small> <b>VEGGIES</b> <small>SENSOR COOK</small>

Press Sensor Cook	Food	Amount
x 1	Frozen Veggies	7-20 oz.
x 2	Fresh Veggies	7-20 oz.
x 3	Chicken	7-18 oz.
x 4	Fish	7-18 oz.
x 5	Frozen Pizza	6-12 oz.
x 6	Frozen Lasagna	6-32 oz.
x 7	Oatmeal	/
x 8	Omelet	2-4 eggs
x 9	Soup	1-2 cups (250ml/cup)

## OPERATION (continued)

### SENSOR REHEAT

#### BEVERAGE

In Standby or Clock mode:

To reheat a beverage, press the "Sensor Reheat" button once, and the screen will display "Beverage".

Press the START button, and the screen will display "Enter 1-3 Cup".

Using the number buttons, select the number of cups (in this case "2", as shown) and the screen displays "2 Cups".

Press START to activate cooking process.

You can press START again to increase cooking time by 30 second increments.

**touch:**

**display shows:**

1. BEVERAGE X2	PRESS AGAIN FOR OPTIONS/ PRESS START <div style="text-align: center; font-size: 24px; font-weight: bold;">2 CUPS</div>
2. <span style="border: 1px solid black; padding: 2px 5px; display: inline-block;">START +30 SEC</span>	Time counting down <div style="text-align: center; font-size: 18px; font-weight: bold;">COOK</div> (3 seconds later)

Press Beverage pad	Amount
x 1	1 Cup
x 2	2 Cups
x 3	3 Cups

### SENSOR REHEAT

See the chart below for Sensor Reheat times for common foods.

**NOTE:** The weight of these menus cannot be adjusted: Soup/Sauce, Dinner Plate, Casserole/Lasagna, Roll/Muffin

In Standby or Clock mode:

To reheat soup or sauce, press the Sensor Reheat button twice

Once cooking is underway, you can press START again to increase cooking time by 30 second increments.

**touch:**

**display shows:**

1. SENSOR REHEAT X2	PRESS AGAIN FOR OPTIONS/ PRESS START <div style="text-align: center; font-size: 24px; font-weight: bold;">SOUP</div> <div style="text-align: center; font-size: 10px;">SENSOR</div> PRESS AGAIN FOR OPTIONS/ PRESS START <div style="text-align: center; font-size: 24px; font-weight: bold;">SAUCE</div> <div style="text-align: center; font-size: 10px;">SENSOR</div>
2. <span style="border: 1px solid black; padding: 2px 5px; display: inline-block;">START +30 SEC</span>	<div style="text-align: center; font-size: 24px; font-weight: bold;">SOUP</div> <div style="text-align: center; font-size: 10px;">SENSOR COOK</div> <div style="text-align: center; font-size: 24px; font-weight: bold;">SAUCE</div> <div style="text-align: center; font-size: 10px;">SENSOR COOK</div>

Press Sensor Reheat button	Food	Amount
x 1	Dinner Plate	1 -2 cups
x 2	Soup/Sauce	1 -2 cups
x 3	Cassarole	10.5 oz.

## OPERATION (continued)

### MELT/SOFTEN

The oven uses low power to melt and soften foods. See the chart below for Melt/Soften times for common foods.

In Standby, Clock, or Timer mode:

To melt butter, press the "Melt/Soften" button once, and the screen will display "Melt Butter".

Press the START button, and the screen will display "Enter 1-2 STK".

Using the number buttons, select the number of cups (in this case "2", as shown) and the screen displays "2 STICK".

Press START to activate cooking process.

Once cooking is underway, you can press START again to increase cooking time by 30 second increments.

touch:	display shows:
1. Melt/ Soften <span style="font-size: 1.5em;">x1</span>	<small>PRESS AGAIN FOR OPTION</small> <small>PRESS START</small> <b>MELT</b> <small>PRESS AGAIN FOR OPTION</small> <small>PRESS START</small> <b>BUTTER</b>
2. <b>START</b> +30SEC.	<b>ENTER</b> <b>1-2 STK</b>
3. <span style="border: 1px solid black; border-radius: 50%; padding: 2px 5px;">2</span>	<small>PRESS START</small> <b>2 STICK</b>
4. <b>START</b> +30SEC.	<b>Time counting down</b> (2 seconds later)

Press Melt Soften button	Food	Amount
x 1	Melt Butter	1/2 stick
x 2	Melt Chocolate	2/4/8 oz.
x 3	Soften Ice Cream	1 Pint / 1.5 Quart
x 4	Soften Cream Cheese	3/8 oz.

## OPERATION (continued)

### AUTO COOK

The weight of these menu items can be set: scrambled eggs, hot cereal, frozen pizza and other similar dishes.

See the chart below for Auto Cook times for common foods.

Once cooking is underway, you can press START again to increase cooking time by 30 second increments.

touch:	display shows:
1. Auto cookX1	<small>PRESS AGAIN FOR OPTION</small> <small>PRESS START</small> SCRAMBL <small>PRESS AGAIN FOR OPTION</small> <small>PRESS START</small> 00 EGG5
2. <b>START</b> +30SEC.	1 - 6
3. (2)	<small>PRESS START</small> 2
4. <b>START</b> +30SEC.	Time counting down (2 seconds later)

The weight of these menu items cannot be set: fudge brownies, garlic shrimp, stuffed mushrooms, asiago red potatoes, roasted vegetable medley, lemon shrimp risotto and other similar dishes:

See the chart below for Auto Cook times for common foods.

Once cooking is underway, you can press START again to increase cooking time by 30 second increments.

touch:	display shows:
1. Auto cook X4	<small>PRESS AGAIN FOR OPTION</small> <small>PRESS START</small> FUDGE <small>PRESS AGAIN FOR OPTION</small> <small>PRESS START</small> BROWNIE <small>PRESS AGAIN FOR OPTION</small> <small>PRESS START</small> 5
4. <b>START</b> +30SEC.	Time counting down (2 seconds later)

Press Auto Cook button	Food	Amount
x 1	Scrambled Eggs	1 - 6
x 2	Hot Cereal	1 -3 servings
x 3	Frozen Pizza	6/8/12 oz
x 4	Fudge Brownies	Per Recipe
x 5	Garlic Shrimp	Per Recipe
x 6	Stuffed Mushrooms	Per Recipe
x 7	Asiago Red Potatoes	Per Recipe
x 8	Roasted Vegetable Medley	Per Recipe
x 9	Lemon Shrimp Risotto	Per Recipe


## OPERATION (continued)

### FROZEN ENTREES

In Standby, Clock or Timer mode:

- Press Frozen Entrees once
- Press Start button

Once cooking is underway, you can press START again to increase cooking time by 30 second increments.

touch:	display shows:
1. FROZEN ENTREES X1	<small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> FROZEN <small>SENSOR</small> <small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> ENTREES <small>SENSOR</small>
2. 	FROZEN <small>SENSOR COOK</small> ENTREES <small>SENSOR COOK</small>


### WEIGHT DEFROST

In Standby, Clock or Timer mode:

To set the defrost weight for 1.2 lb:

- Press the Weight Defrost button once, the display will show "Enter Weight".
- Press the 1 and 2 buttons to select a weight of 1.2 lbs.
- Press the Start button

Once defrosting is underway, you can press START again to increase cooking time by 30 second increments.

touch:	display shows:
1. WEIGHT DEFROST X1	<small>DEFR.</small> ENTER <small>DEFR.</small> WEIGHT
2. ① ②	<small>PRESS START</small> <small>DEFR.</small> 1.2 lb
3. 	Time counting down (2 seconds later)

#### NOTE:

1. The valid range of weight is 0.1-6.0 lb.
2. A buzzer will sound to remind you to turn the food over during defrosting. The count-down will continue whether the operation is paused or not.



## OPERATION (continued)

### TIME DEFROST

In Standby, Clock or Timer mode:

- Press the Time Defrost button once, and the screen will display "Enter Time".
- Using the number buttons, enter the desired defrosting time (in this case, 2,0,0 are pressed to program 2 minutes - 2:00)
- Press START to activate the defrost process.

**NOTE:** A buzzer will sound to remind you to turn the food over during defrosting.

The countdown will continue whether the operation is paused or not.

touch:	display shows:
1. TIME DEFROST X1	DEFR. ENTER DEFR. TIME
2. 2 0 0	PRESS START DEFR. 2:00
3. START +30 SEC	DEFR. 2:00 COOK Time counting down (2 seconds later)

### DEFROSTING TIPS

- When using Auto Defrost, enter the net weight in pounds and tenths of pounds (the weight of the food minus the container).
- Before starting, make sure to remove any and all metal twist-ties and/or tags that come with frozen food bags, and replace them with string or elastic bands.
- Open cartons/containers before placing in the microwave. Always pierce plastic pouches and packaging before putting them in the microwave.
- If the food is foil-wrapped, remove foil and place food in a microwave safe container.
- Pierce or slit the skin of skinned food, such as potatoes or sausage.
- Bend/squeeze plastic pouches of food to ensure even defrosting.
- Always underestimate defrosting time. If defrosted food is still icy in the centre, return it to the microwave oven for more defrosting.
- The length of a defrosting time varies according to how solidly the food is frozen.
- The shape of the package affect how quickly food will defrost. Shallow packages will defrost more quickly than a deep block.
- As food defrosts, separate the pieces so that it defrosts more quickly.
- Use small pieces of aluminum foil to shield parts of food such as chicken wings, leg tips, fish tails, or areas that start to get warm. Make sure the foil does not touch the sides, top, or bottom of the oven as the foil can damage the oven lining.
- For better results, let food stand after defrosting. Turn over food during defrosting or standing time. Break apart and remove defrosted food as required.
- For best results, remove fish, shellfish, meat and poultry from its packaging, otherwise the wrap will hold steam and juice close to the foods, which can cause the outer surface of food to cook during the defrosting process.
- For best results, roll your ground meat into a ball before freezing. During the DEFROST cycle, the microwave will signal when it is time to turn the meat over. Scrape off any excess frost from the meat and continue defrosting.
- Place foods in a shallow container or on a microwave roasting rack to catch drippings.

## OPERATION (continued)

### SPEED COOKING




If the oven door hasn't been opened/closed, or if the door has been closed for more than 5 minutes since the oven was plugged in, "FOOD" will appear on the display reminding you to place food in the oven and close the door before operating.

#### 1-9 PAD

In Standby, Clock or Timer mode:

- Press the number pads 1-9 to start cooking for 1-9 minutes at 100% power level.

For example, cooking for 6 minutes at 100% power level:

touch:	display shows:
1. 	
2. After 2 seconds	

### START / +30 SEC

In Standby or Timer mode, press "START/+30SEC" to start cooking with 100% power level for 30 seconds. Once cooking is underway, you can press START again to increase cooking time by 30 second increments (to a maximum time of 99:99.)

### CHILD LOCK

To activate child lock in Standby mode:

- Press and hold the "Stop / Reset" button for 3 seconds
- The display will show "LOCKED"

touch:	display shows:
1.  (Hold 3 seconds)	

To cancel child lock, in "LOCKED" mode:




- Press and hold the "Stop / Reset" button for 3 seconds.
- The display will show "UNLOCK"

touch:	display shows:
1.  (Hold 3 seconds)	

### VENT FAN

The fan has 2 settings - LOW and HIGH.

When the vent fan is OFF, the first press of the button will turn the fan on HIGH, a second press will switch the fan to LOW, and a third press will turn it OFF.




touch:	display shows:
 x1	HIGH
 x1	LOW
 x1	OFF

## OPERATION (continued)

### LIGHT

The light has 2 settings - LOW and HIGH.

When the light is OFF, the first press of the button will turn the light on HIGH, a second press will switch the light to LOW, and a third press will turn it OFF.

touch:	display shows:
 x1	HIGH
 x1	LOW
 x1	OFF

### TURNTABLE ON/OFF

The default mode for the turntable is ON.

- Press the TURNTABLE ON/OFF button once to turn rotation off. The display will show "OFF".
- Press the TURNTABLE ON/OFF button once again to turn rotation on. The display will show "ON".

**NOTE:** The turntable function cannot be changed when the microwave is in menu or defrost functions.

touch:	display shows:
TURNTABLE ON/OFF x1	OFF

touch:	display shows:
TURNTABLE ON/OFF x1	ON

### INQUIRING FUNCTION

If the clock or timer has been set, the corresponding time will display for 2 seconds by pressing "Timer/Clock" while in the cooking state.

### USER PREF

KEY	SETTING
USER PREF X 1	Volume Hi/Med/Low/Off
USER PREF X 2	Weight lb/kg
USER PREF X 3	Clock Display Off/On
USER PREF X 4	Demo


# OPERATION (continued)

## VOLUME LOW/MED/HIGH/OFF

In Standby mode:  
(the mode will switch every 3 seconds)

To turn the volume OFF:

- Press USER PREF once, the display will show VOLUME LOW.
- Press START to set, or press USER PREF again, and the display will show VOLUME MED.
- Press START to set, or press USER PREF again, and the display will show VOLUME HIGH.
- Press START to set, or press USER PREF again, and the display will show VOLUME OFF.
- Press START to set.


touch:	display shows:
1. USER PREF x1	<small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> VOLUME LOW  <small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> VOLUME MED  <small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> VOLUME HIGH  <small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> VOLUME OFF
2. 	OFF

## WEIGHT (LBS/KG)

In Standby mode:  
Switch between weight units in pounds (lbs)  
or kilograms (kg).

To switch weight units:

- Press USER PREF twice, the display will show LB / KG.
- Press START to set LB, or press USER PREF again to select KG.
- Press START to set.

touch:	display shows:
1. USER PREF x2	<small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> LB / KG
2. 	LB lb


## OPERATION (continued)

### CLOCK DISPLAY ON / OFF

The default setting for the clock display is ON.

To turn clock display OFF::

- Press USER PREF three times, the display will show CLOCK DISPLAY ON
- Press START to set ON, or press USER PREF again to select OFF .
- Press START to set.

touch:	display shows:
1. USER PREF x3	<small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> CLOCK DISPLAY ON
2. 	OFF


### DEMO SETTING

**NOTE:** In Demo mode, the cooking function can be set, but it does not actually function.

The default setting for the Demo setting is OFF.

To turn Demo setting ON:

- Press USER PREF four times, the display will show DEMO OFF.
- Press START to set OFF, or press USER PREF again to select ON .
- Press START to set.


touch:	display shows:
1. USER PREF x4	<small>PRESS AGAIN FOR OPTIONS/ PRESS START</small> DEMO OFF
2. 	ON

## TROUBLESHOOTING

Many common appliance problems can be solved by following the suggestions below. If the microwave still does not work properly after trying these suggestions, contact the nearest authorized service centre or Unique Appliances Customer Service.

PROBLEM	POSSIBLE CAUSE	SOLUTIONS
Microwave will not start	<ul style="list-style-type: none"> <li>• The microwave is not plugged in correctly</li> <li>• The door is open</li> <li>• The wrong operation is set</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure the microwave is plugged in correctly</li> <li>• Close the door and try again</li> <li>• Consult the instructions for appropriate operation/ setting</li> </ul>
Arcing or sparking	<ul style="list-style-type: none"> <li>• Materials not compatible with microwave have been used</li> <li>• The microwave is being used while empty</li> <li>• There are spills in the microwave cabinet</li> </ul>	<ul style="list-style-type: none"> <li>• Only use microwave-safe cookware</li> <li>• Do not operate the microwave when empty</li> <li>• Clean up any spills or residue</li> </ul>
Unevenly cooked food	<ul style="list-style-type: none"> <li>• Materials not compatible with microwave have been used</li> <li>• Food is not completely defrosted before cooking</li> <li>• Cooking time and/or power level is not suitable</li> <li>• Food has not been stirred/turned</li> </ul>	<ul style="list-style-type: none"> <li>• Only use microwave-safe cookware</li> <li>• Ensure food is completely defrosted before cooking</li> <li>• Use the correct cooking time and power level</li> <li>• Turn/stir food while cooking</li> </ul>
Overcooked food	<ul style="list-style-type: none"> <li>• Cooking time and/or power level is not suitable</li> </ul>	<ul style="list-style-type: none"> <li>• Use the correct cooking time and power level</li> </ul>
Undercooked food	<ul style="list-style-type: none"> <li>• Materials not compatible with microwave have been used</li> <li>• Food is not completely defrosted before cooking</li> <li>• Microwave ventilation ports are obstructed</li> <li>• Cooking time and/or power level is not suitable</li> </ul>	<ul style="list-style-type: none"> <li>• Only use microwave-safe cookware</li> <li>• Ensure food is completely defrosted before cooking</li> <li>• Ensure microwave ventilation ports are unobstructed.</li> <li>• Use the correct cooking time and power level</li> </ul>
Improper defrosting	<ul style="list-style-type: none"> <li>• Materials not compatible with microwave have been used</li> <li>• Cooking time and/or power level is not suitable</li> <li>• Food has not been stirred/turned</li> </ul>	<ul style="list-style-type: none"> <li>• Only use microwave-safe cookware</li> <li>• Use the correct cooking time and power level</li> <li>• Turn/stir food while cooking</li> </ul>



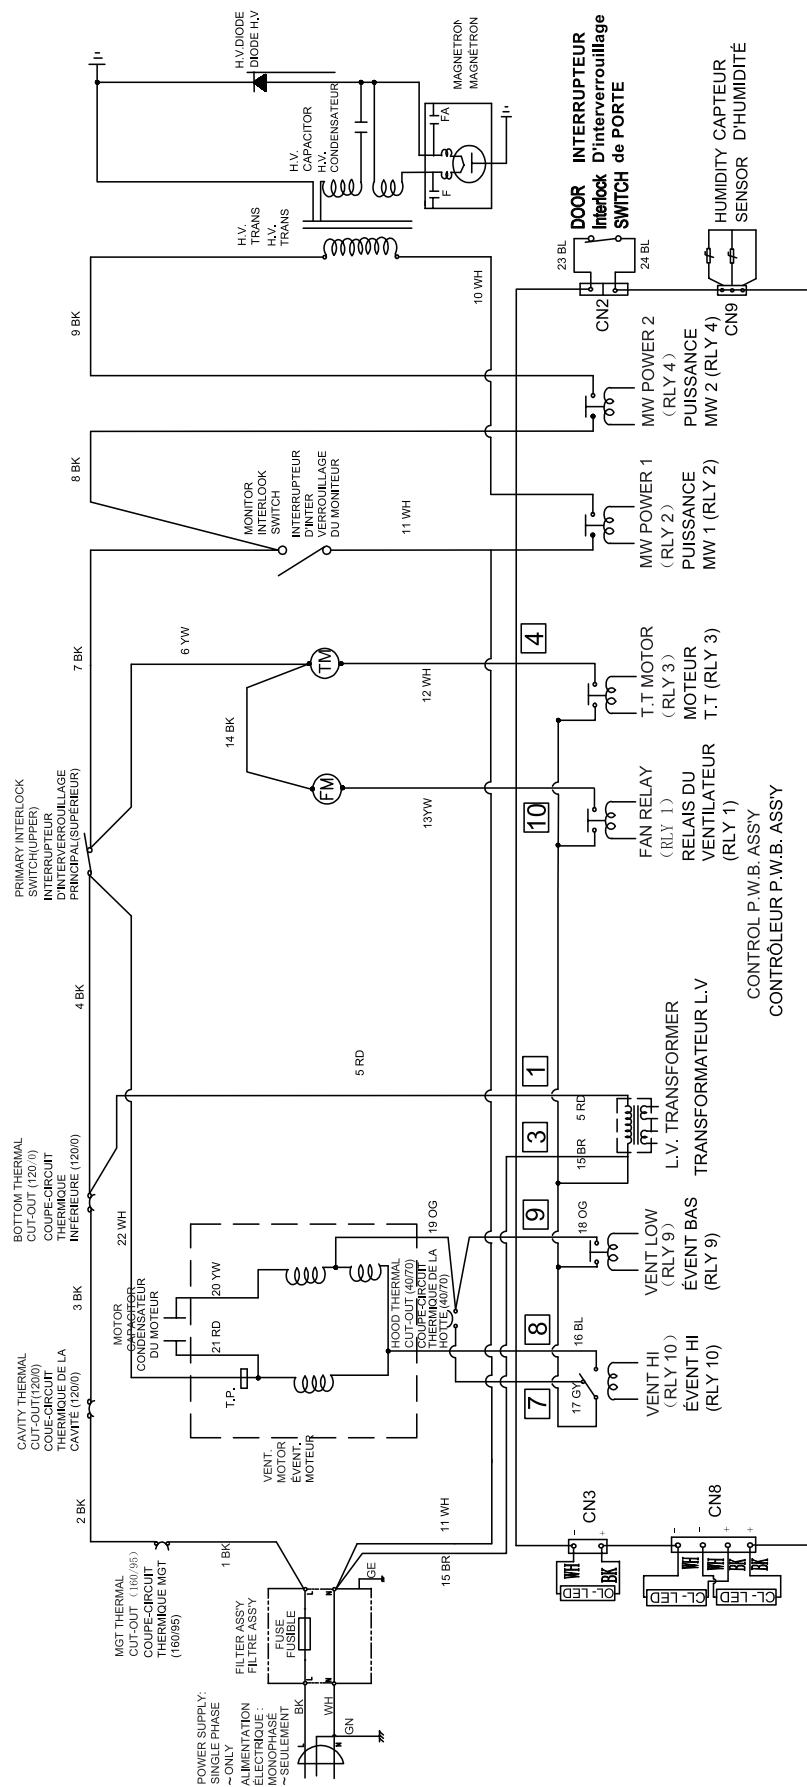

# WIRING DIAGRAM



**NOTE:**  
REMARQUE:

(C) DOOR CLOSED	(O) OVEN LAMP	(V) VENTILATEUR MOTOR	(Y) YELLOW	(B) BROWN
(CO) COOK OFF	(F) FAN MOTOR	(M) MOTEUR DU PLATEAU TOURNANT	(W) WHITE	(BL) BLANC
(C) COOK	(T) TURNABLE MOTOR	(M) MOTEUR DE L'AGITATEUR	(R) RED	(BK) BLACK
(CO) COOK: ETIEN	(L) LAMP	(L) LAMP DE LA TABLE DE CUISSON	(BL) BLUE	(GY) GREY
	(M) CONVECTION MOTOR	(M) MOTEUR A CONNECTION	(GN) GREEN	(PK) PINK
			(OG) ORANGE	(RO) ROSE

# RATING LABEL

	<p>MICROWAVE OVEN FOUR À MICRO-ONDES                  Power Supply / Alimentation: 120VAC 60Hz                  Rated Input (Microwave) / Entrée Nominale (Micro-ondes) : 1500W                  Rated Output (Microwave) / Puissance Nominale (Micro-ondes) : 1000W                  Microwave Output Frequency / Fréquence de Sortie des Micro-ondes: 2450MHz                  FCC ID/ID FCC: VG8TM034KYYC</p>		<p><b>WARNING:</b> Cancer and Reproductive Harm-<a href="http://www.P65Warnings.ca.gov">www.P65Warnings.ca.gov</a></p> <p><b>Avertissement:</b> Cancer et troubles de la reproduction Harm-<a href="http://www.P65Warnings.ca.gov">www.P65Warnings.ca.gov</a></p> <p>Manufacture Date/date De Fabrication : MM.YYYY                  MADE IN SHUNDE CHINA / FABRIQUÉ EN SHUNDE CHINE</p>	<p>CAUTION MICROWAVES                  MISE EN GARDE MICRO-ONDES</p>  <p><b>Energy Verified                  Rendement                  Énergétique Vérifié</b></p>	
<p>THIS DEVICE COMPLIES WITH DHHS RADIATION PERFORMANCE STANDARDS 21 CFR SUBCHAPTER J.                  CET APPAREIL EST CONFORME AU DHSS NORMES DE PERFORMANCE RADIOLOGIQUE 21 CFR, SOUS-CHAPITRE J.</p>					
<p>© Unique Appliances Ltd. All rights reserved / Tous droits réservés. Designed and manufactured for / Conçu et fabriqué pour:                  Unique Appliances Ltd. 2245 Wyecroft Road #5, Oakville, Ontario, Canada L6L 5L7 <a href="http://www.UniqueAppliances.com">www.UniqueAppliances.com</a></p>					

Net weight	23.2kg
Gross weight	27.09kg
Product Size	759*472.6*261.7mm
Package Size	845*555*380mm



# WARRANTY

**Unique Appliances Ltd. (hereafter “Unique”) warrants that this UNIQUE appliance is free from manufacturer’s defects in material and workmanship under normal usage and service under the following terms.**



## **Parts Warranty**

This appliance has been designed for domestic household use. If properly installed, adjusted and operated under normal conditions in accordance with printed instructions, it will satisfactorily perform the functions that are generally expected of this type of appliance.

If the appliance fails to do so because of a defect in material or workmanship within **one year** from the original date of purchase: Unique will at our option, repair, exchange, or correct by other means Unique consider appropriate, any part(s) Unique finds to be defective except for the surface finish.

## **Ownership**

This Warranty is made only to the first purchaser (“original purchaser”) who acquires this appliance for his/her own use and will be honored by Unique Appliances and by the Seller. Purchaser must retain their receipt as proof of purchase date.

## **Warranty Conditions**

This warranty does not apply to any appliance that has been subjected to alterations, misuse, abuse (including damage by foreign agents or chemicals), accident, improper installation or service, delivery damage, or other than normal household use and service. This UNIQUE appliance must be serviced regularly as outlined in the Owner’s Manual. In case of damage, the owner must provide proof of purchase, Model, and Serial Number to the selling dealer or Unique Appliances. This warranty is LIMITED STRICTLY to the terms indicated herein, and no other expressed warranties or remedies thereunder shall be binding on Unique.

## **Purchaser’s Responsibilities**

The purchaser will be responsible for the costs of any service calls requested to demonstrate or confirm the proper operation of the appliance, the installation, or to correct malfunctions in the appearance created by the operation of the appliance in a manner not prescribed by or cautioned against in the use and care instructions.

## **Model and Serial Number**

The appliance model number and serial number can be found on a rating plate on the range. The purchaser should always refer to the model and serial number when talking to or contacting the dealer from whom the appliance was purchased.

## **EXCLUSIONS**

Save as herein provided, by Unique, there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by Unique or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, Unique shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and hold harmless Unique from any claim for damages to persons or property caused by the unit

Removal or disfigurement of the rating plate will void the warranty. The purchaser will be responsible for any expenses involved in making the range readily accessible for servicing. The purchaser will be responsible for any extra charges where the installation is in a remote location such as unassumed roads, islands, areas known as cottage country, more than 75 km outside a metropolitan area, or where a technician is not available. Freight damage is not covered by this warranty.

## **GENERAL PROVISIONS**

No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following:

- 1) Power failure.
- 2) Damage in transit or when moving the appliance.
- 3) Improper power supply such as low voltage, defective house wiring or inadequate fuses.
- 4) Accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions (ie. extremely high or low room temperature).
- 5) Use for commercial or industrial purposes (ie. If the appliance is not installed in a domestic residence).
- 6) Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- 7) Service calls resulting in customer education.
- 8) Improper Installation (ie. building-in of a free standing appliance or using an appliance outdoors that is not approved for outdoor application, including but not limited to: garages, patios, porches or anywhere that is not properly insulated or climate controlled).

Proof of purchase date will be required for warranty claims; retain bills of sale. In the event that warranty service is required, present the proof of purchase to our authorized service depot.

**Nothing within this warranty shall imply that Unique will be responsible or liable for any direct or indirect loss of foods caused by failure in operation.**

## **Factory Assistance**

If the purchaser is unable to locate an authorized dealer/service agent, or if the purchaser does not receive satisfaction from the dealer, they may contact Unique Appliances Customer Service directly at Toll Free 1-877-427-2266 or 905-827-6154.

## APPLIANCE INFORMATION

### APPLIANCE INFORMATION

(manual copy - keep with your records)

To make care and servicing of your microwave easy and efficient, please record the following information for future reference:

Model:

---

Serial Number:

---

Purchased From:

---

Date Purchased:

---

## PRODUCT REGISTRATION



Scan the QR Code

or

Visit our website at <https://uniqueappliances.com/product-registration/> to register your product.





©2024 Unique Appliances Ltd., 2245 Wycroft Road #5,  
Oakville, Ontario, Canada, L6L 5L7

[www.uniqueappliances.com](http://www.uniqueappliances.com)