


PARTS DIAGRAM AND LIST

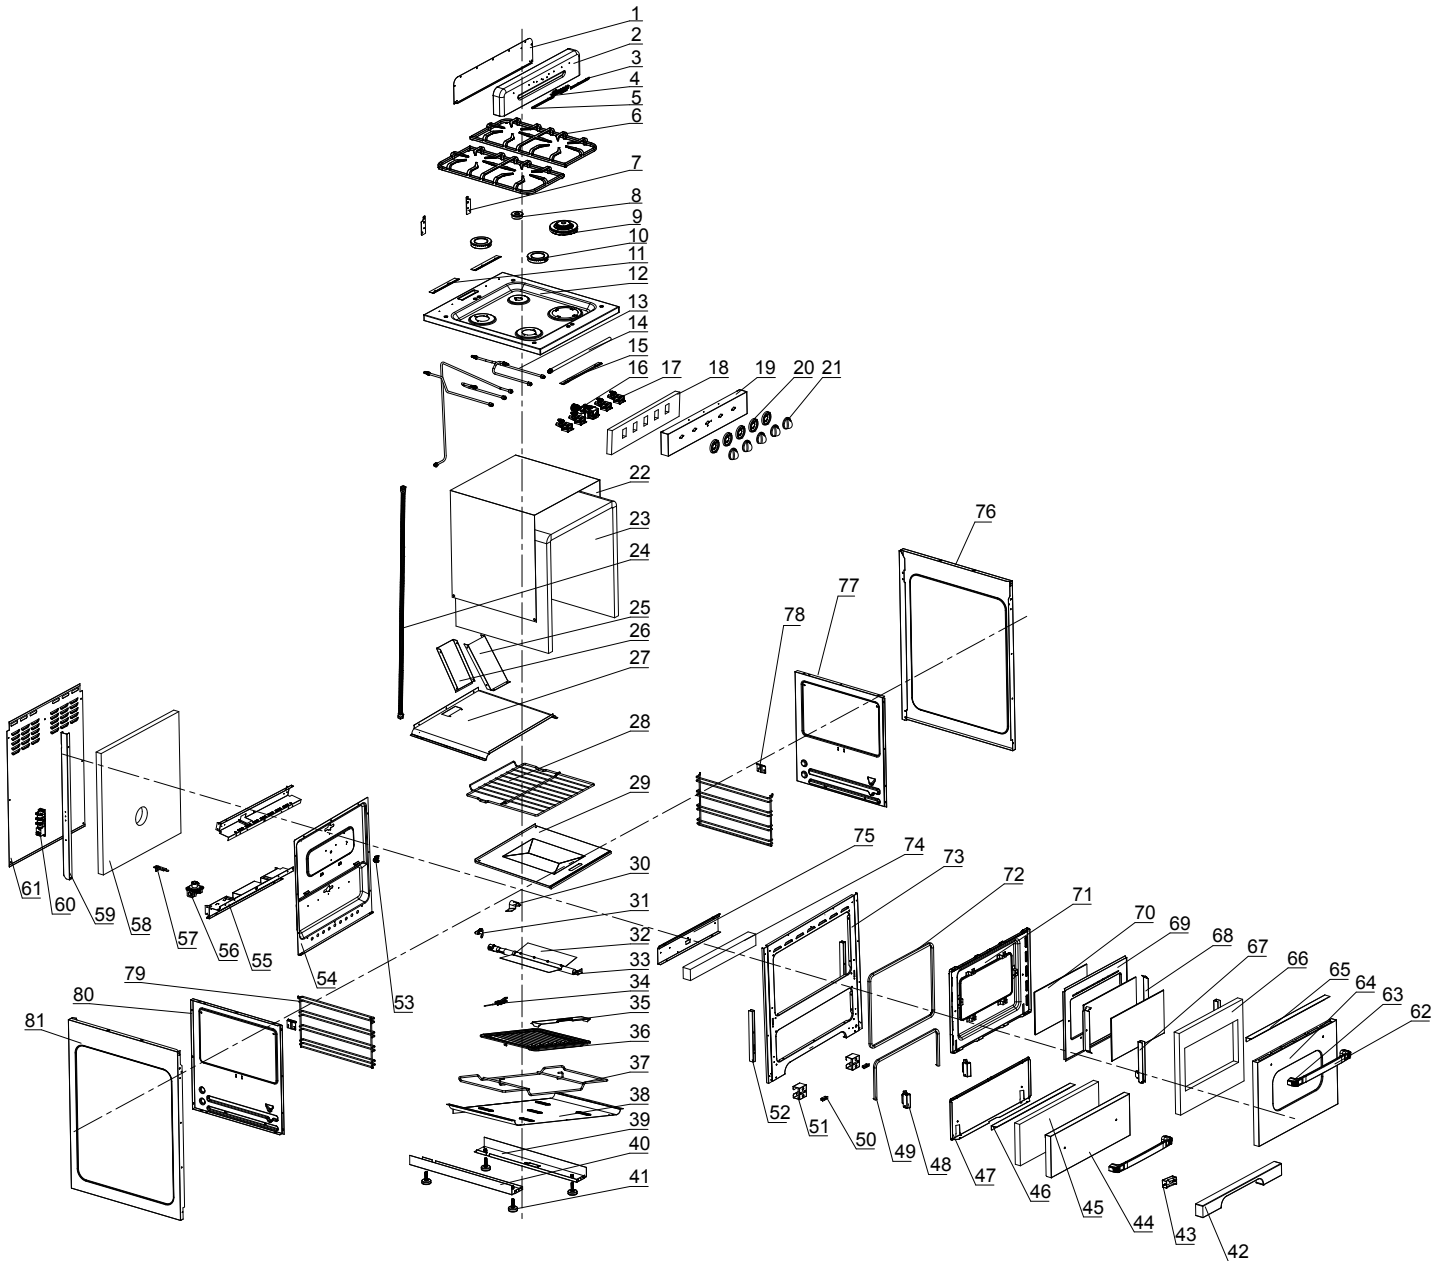

Please visit our website www.UniqueAppliances.com to view a PDF version of the schematics which will allow you to zoom in and out.

PARTS DIAGRAM AND LIST

Item #	Description	Part #
1	Back splash board cover	CYJ00141
2	Backsplash board	PSJ00049-W
3	Left logo (sold as backsplash assembly)	JSJ00006
4	Middle logo (sold as backsplash assembly)	CY99109
5	Right logo (sold as backsplash assembly)	JSJ00007
6	Cast iron grate	DWWJ01019
7	Fixed board	CY14516
8	55# burner flame diffuser	DWWJ01343
	55# burner bottom cup	DWWJ01343-1
	55# burner Burner cap	DWWJ01343-2
9	130# burner flame diffuser	DWWJ01341
	130# burner bottom cup	DWWJ01341-1
	130# burner Burner cap	DWWJ01341-2
	130# burner ring	DWWJ01341-3
10	100# burner flame diffuser	DWWJ01342
	100# burner bottom cup	DWWJ01342-1
	100# burner Burner cap	DWWJ01342-2
11	Clip board for backsplash board	CY14515-1
12	Cooking panel	WSJ13248-4
13	Right rear Aluminum gas pipe assembly	DWWJ01003
	Right front Aluminum gas pipe assembly	DWWJ01004
	Left rear Aluminum gas pipe assembly	DWWJ01006
	Left front Aluminum gas pipe assembly	DWWJ01005
	Bottom burner gas pipe assembly	DWWJ01007
14	Main gas pipe assembly	DWWJ01001
15	Cooking panel block	CY14226
16	Thermostat valve	DWWJ01114-2
17	Gas valve (0.45)	DPJ99170
	Gas valve (0.55)	DPJ99171
	Gas valve (0.68)	DPJ99172
18	Control panel heat-resistance cotton	DPJ99002
19	Control panel	WSJ13273SY-01-W
20	Bezel	WSJ040003
21	Knob assembly	QJG05018
22	Liner heat-resistance board	CY14242
23	Liner heat-resistance cotton	DPJ99004
24	Below	DWWJ01002
25	Smoke diffuser A	CY14239
26	Smoke diffuser B	CY14240
27	Liner topboard	WSJ13243
28	Oven rack	DWWJ01012
29	Oven floor	WSJ13267
30	ODS bracket	CY14572
31	Nozzle base	DPJ24070
32	Bottom burner flame spreader	CY04248
33	Burner	DWWJ01296
34	ODS Assembly	DXQJ9912-9

PARTS DIAGRAM AND LIST

Item #	Description	Part #
35	Cooking pan cover	WSJ13269
36	Cooking pan	WSJ13268
37	Cooking pan bracket	DWWJ01013
38	Liner bottom board	WSJ13244
39	Feet assembly board (left)	CY14237
40	Feet assembly board (right)	CY14238
41	Feet	DWWJ01010
42	Kick plate	PSJ00050-W
43	Battery box	DWWS90026-1
44	Broiler panel	PSJ00051-W
45	Broiler heat-resistance cotton	DPJ99007
46	Decorate strip	CYJ00056
47	Broiler inner panel	PSJ00052
48	Broiler door hinge	DWWJ01017
49	Broiler seal	DWWJ01018
50	Door magnet	DWJ9945-4
51	Kick plate support	CY14266
52	Hinge base	DWWJ01345-1
53	Fixed board	CY14249
54	Liner back board	WSJ13240
55	Liner support	CY14241
56	Pressure-steady valve	DPJ24060
57	Fixed board for valve	CY14271
58	Liner back heat-resistance cotton	DPJ99005
59	Back panel support bar	CY14250
60	Pulse igniter	DXQJ9977-1
61	Back panel	CY14254-1
62	Handle	PSJ00053-W
63	Left/side handle base	CY99112
64	Door panel	PSJ00003-W
65	Door top cover	CYJ00060
66	Door heat-resistance cotton	DPJ99006
67	Door hinge	DWWJ01016-2
68	Door middle glass fixed part	CY14261
69	Door inner glass fixed part	CY14257
70	Glass	DQT01003
71	Door inner panel	PSJ00056
72	Liner seal	DWWJ01014
73	Liner front panel	PSJ00055
74	Liner front heat-resistance cotton	DPJ99003
75	Burner fixed bar	CY14231
76	Outside Left side panel	WSJ13245-1-W
77	Liner left side panel	WSJ13241
78	Cooking grid bracket fixed part	CY14270
79	Cooking grid bracket	DWWJ01011-1
80	Liner right side panel	WSJ13242
81	Outside right side panel	WSJ13246-1-W
	Oven Door Assembly	QJG00026
	Broiler Door Assembly	QJG00030